

Installing Pipe Flashings for Metal Roofs



- Step 1** **SELECT** a suitably sized Pipe Flashing and cut a circular hole in the Pipe Flashing approx. 20% smaller than the diameter of the pipe to be flashed around
- Step 2** **SLIDE** the Pipe Flashing down over the pipe (using a non-petroleum based lubricant will ease the installation)
- Step 3** **SHAPE** the Pipe Flashing by pressing down & bending it to conform to the roof profile or irregularities. Blunt tools will help push the flashing into tight roof angles
- Step 4** **SEAL** - apply a sealant between the base of the Pipe Flashing and the metal roof panel
- Step 5** **SECURE** with suitable fasteners to complete the seal. Fastener spacing should not exceed 1-1/2" (38mm)